


# INSTALLATION INSTRUCTIONS

## Replacement O-ring Kit Retrofit Insert in Housing *WITHOUT* a Valve

Models: DT800V, DST800V

**IMPORTANT:** Please read these instructions completely before proceeding with the installation. These instructions supersede any other instructions if they differ.

**WARNING:** There must be a large **black** o-ring near the top of the insert when it is installed in a housing **without** a valve. The black o-ring will form a watertight seal. Failure to replace the yellow o-ring with the black o-ring may allow water to leak into the vessel, possibly resulting in property damage, personal injury, and/or death.

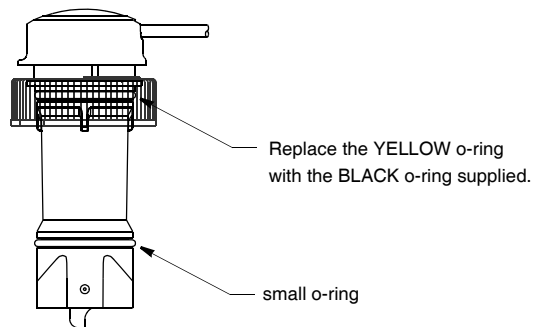

Insert

Copyright © 2005 -2011 Airmar Technology Corp.

### Replacing the O-ring

The insert comes with a yellow o-ring that will *not* fit into a housing *without* a valve. The yellow o-ring is too large for the opening in the housing. To form a watertight seal, it is necessary to remove the yellow o-ring and replace it with the black o-ring supplied.

1. Remove the yellow o-ring found near the top of the insert.
2. Replace it with the large black o-ring supplied.
3. Lubricate both the large black o-ring and the small o-ring near the bottom of the insert with the silicone lubricant supplied or petroleum jelly (Vaseline®).
4. Proceed with the installation following the instructions that came with the sensor.

Obtain parts from your instrument manufacturer or marine dealer.

Gemeco  
(USA)

Tel: 803-693-0777  
Fax: 803-693-0477  
email: [sales@gemeco.com](mailto:sales@gemeco.com)

Airmar EMEA  
(Europe, Middle East, Africa)

Tel: +33.(0)2.23.52.06.48  
Fax: +33.(0)2.23.52.06.49  
email: [sales@airmar-emea.com](mailto:sales@airmar-emea.com)

**AIRMAR**<sup>®</sup> 35 Meadowbrook Drive, Milford, New Hampshire 03055-4613, USA  
TECHNOLOGY CORPORATION [www.airmar.com](http://www.airmar.com)

Copyright © 2005 - 2011 Airmar Technology Corp. All rights reserved.